



broadcastvision entertainment

PVS Mounts for use with BK LK-series Cardio Equipment



This installation manual is for the following products:

BH-PVSMNT-LKT6/8 – Treadmill.....	page 3
BH-PVSMNT-LK500Ti / LK700Ti – Treadmill.....	page 4
BH-PVSMNT-LK500X(i) / LK700X – Elliptical.....	page 5
BH-PVSMNT-LK500R / LK500Ri – Recumbent Bike.....	page 6
BH-PVSMNT-LK500U / LK500Ui – Upright Bike.....	page 7



broadcastvision entertainment

Installation Tips:

1. These mounts attach to the BH commercial series cardio equipment at the location of the 4 console bolts except for bike products which clamp onto the handlebars behind the console.
2. For non-bike products, remove the 4 factory console bolts then re-install the bolts with the mount in place.
3. For best operation, it is critical that the treadmills be balanced using the adjustable feet. An out of balance treadmill will result in excessive vibration in the mount / TV.
4. For bike installations, use the clamp hardware provided to secure the mount. Note that the mount plate installs on the handlebar side that is opposite the exerciser. The mating clamp should be installed on the exerciser side as seen below.
5. It may be easier to connect the power and coaxial connections to the TV first before attaching the TV to the mount.





broadcastvision entertainment

BH-PVSMNT-LKT6 / LKT8 - TREADMILL



No extra hardware needed. The existing console bolts secure the mount as well. The mount attaches to the treadmill with the same bolts that are already holding the console in place.



This mount attaches to the bottom of the console with the existing console bolts.



The power and coaxial cables should be run under console and down treadmill leg using wire loom, zip ties and tie mounts provided.





broadcastvision entertainment

BH-PVSMNT-LK500Ti / LK700Ti - TREADMILL



No extra hardware needed. The existing console bolts secure the mount as well. The mount attaches to the treadmill with the same bolts that are already holding the console in place.



To install this mount the console bolts must be removed, then **the mount slides between the console and the treadmill** and the existing bolts are re-installed.



The power and coaxial cables should be run under console and down treadmill leg using wire loom, zip ties and tie mounts provided.



broadcastvision entertainment

BH-PVSMNT-LK500X(i) / LK700X - ELLIPTICAL



No extra hardware needed. The existing console bolts secure the mount as well. The mount attaches to the treadmill with the same bolts that are already holding the console in place.



To install this mount first remove the console and then install the mount in between the console and the elliptical frame.



Remove the plastic boot around the neck of the machine to install the bracket and then replace with the included modified neck that has cutouts for the wires to pass through.



The power and coaxial cables should be run down the elliptical frame using wire loom, zip ties and tie mounts provided.



broadcastvision entertainment

BH-PVSMNT-LK500R / LK500Ri – RECUMBENT BIKE



This mount attaches to the bottom side of the bar underneath the console using the provided handlebar clamp hardware.



The power and coaxial cables should be run down the bike frame using wire loom, zip ties and tie mounts provided.



broadcastvision entertainment

BH-PVSMNT-LK500U / LK500Ui – UPRIGHT BIKE



This mount attaches to the bottom side of the bar underneath the console using the provided handlebar clamp hardware.



The power and coaxial cables should be run down the bike frame using wire loom, zip ties and tie mounts provided.