


HOW TO SET UP THE CONSOLE ADAPTER BOX ON STANDARD CONSOLES

ITEMS NEEDED



#2 Phillips screwdriver



CAB-OCTANE with CSAFE cable

ABOUT THIS PROCEDURE

TIME TO COMPLETE:




≈ 5 minutes

LEVEL OF DIFFICULTY:




STEPS


1. Remove cover from CSAFE port on lower front of the Octane machine.

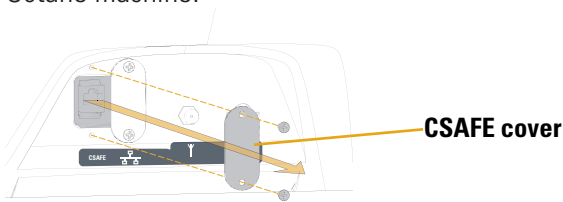

2. Connect CAB-OCTANE with CSAFE cable to CSAFE port on lower front of the Octane machine.

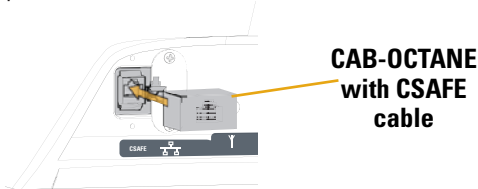


3. Connect IR emitter cable* to CAB-OCTANE and position the IR emitter head over the infrared eye on the front of the cable, satellite, or IPTV set top box.

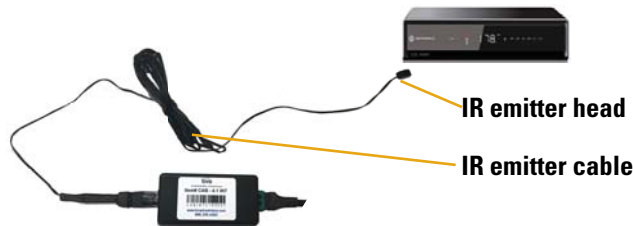


*If the set top boxes are located in another room, the supplied cat5 adapters allow you to use a standard cat5/6 wire from each cardio machine to pass the IR signal back to the AV closet.

4. Press and hold **Program Workout +** and **-** to enter into diagnostics.

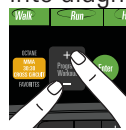


5. When you see the firmware version displayed, press **Enter**.

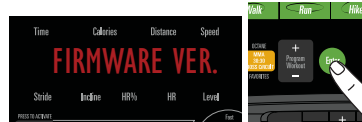


6. Press **Program Workout +** until you see **OCTANE-TV-BVE**.



7. Once you see **OCTANE-TV-BVE** press **Enter**.

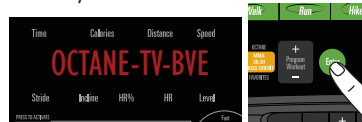

8. This brings you back to the firmware version screen. Press **Pause Clear** to exit.

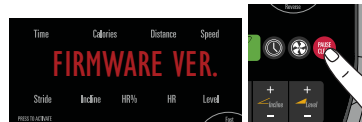

NOTE: When OCTANE-TV-BVE is enabled, pressing the channel **▲▼** buttons on the console keypad changes the channels on the cable box.

